
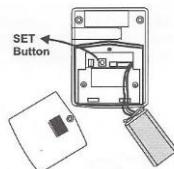


**Instructions for Setup of the AMK-MS**

**The transmitter and receiver are programmed as matched at the factory. No more programming is required. Additional transmitters will require programming with the receiver.**

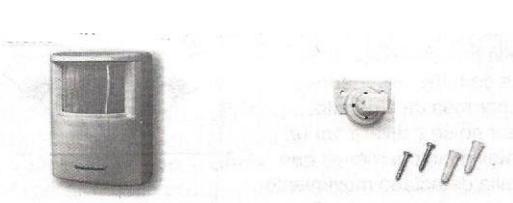

Antenna

**The motion sensor and receiver must be within 100 feet of each other in an open area when using or programming. They work best when avoiding metal surfaces.**

1. On the motion sensor (transmitter), remove the screw and battery cover on the back. Insert your 9V battery into the connector. The lamp on the front (inside the sensor) should light Red for two seconds. Replace the battery cover and screw.
2. On the wireless receiver, plug the white antenna into the side of the unit.
3. On the wireless receiver, plug the pump into the AC plug on the unit.
4. Plug the power cord of the wireless receiver into an AC outlet in the wall. The lamp on the receiver will light red for a second.
5. It is now ready to use.
6. To check this, Wave your hand past the motion sensor front again to check that the pump runs for 5 minutes. If it does not, then follow the instructions for Programming of the AMK-MS.

4. On the wireless receiver, plug the pump into the AC plug on the unit.
5. Plug the power cord of the wireless receiver into an AC outlet in the wall. The lamp on the receiver will light red for a second.
6. **You must complete step 6 and 7 within 25 seconds or you will have to repeat them.** On the wireless receiver, press the white SET button for about 10 seconds until the lamp is constantly red.
7. On the back of the motion sensor in the battery compartment, press the small white button. This should turn off the red light on the wireless receiver.
8. Unplug the wireless receiver. Then plug it back into the wall AC outlet. The lamp will light red for 1 second.
9. On the back of the motion sensor in the battery compartment to the right of the white button, remove the jumper from 60 min and move it to 5 min. Remove the jumper from DARK and move it to OFF. Wave your hand past the motion sensor front until it turns on the pump. If it does not, then go back to step 6.
10. On the wireless receiver, press the white SET button for about 6 seconds until the lamp on the wireless receiver flashes twice in a second (first it will flash once in a second, but keep the SET button pressed down until it flashes twice in a second). The pump should run for 5 minutes then turn off.
11. Wave your hand past the motion sensor front again to check that the pump turns on and runs for 5 minutes then turns off. If it runs for less than 5 minutes or more than 5 minutes, then go back to step 8.

**Instructions for Programming of the AMK-MS**

1. The motion sensor and receiver must be within 100 feet of each other in an open area when using or programming. They work best when avoiding metal surfaces.
2. On the motion sensor (transmitter), remove the screw and battery cover on the back. Insert your 9V battery into the connector. The lamp on the front (inside the sensor) should light Red for two seconds.
3. On the wireless receiver, plug the white antenna into the side of the unit.