


TROUBLE SHOOTING A TM/R-2A WALL MOUNT REMOTE

1. Make sure new or good batteries are installed properly in the transmitter and receiver. Make sure that transmitter is within 20' – 25' range of receiver.

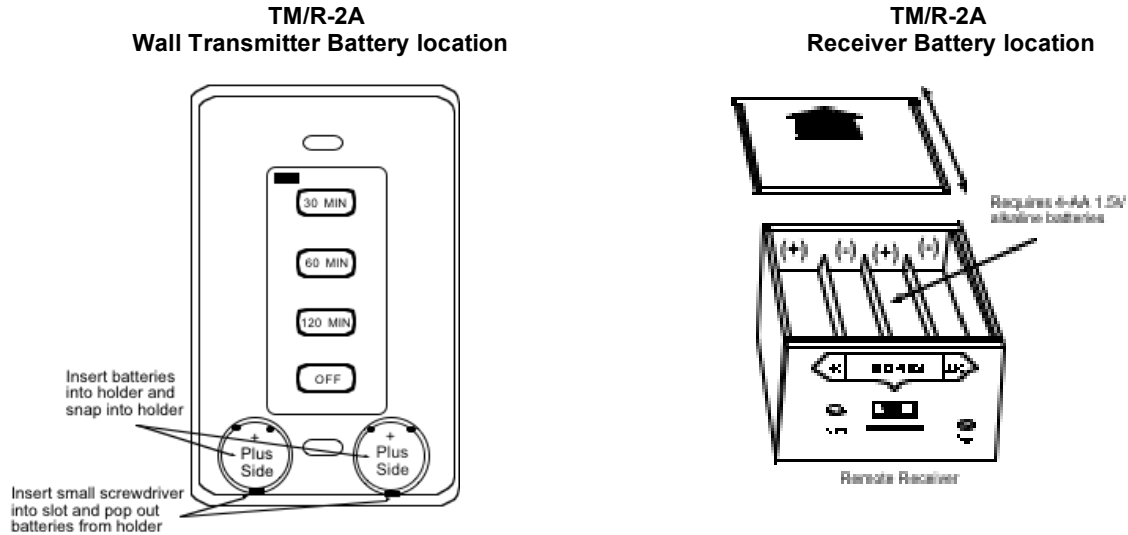

2. As a test, slide the button switch to the “ON” position of the receiver. (The burner should ignite.)

Does light:

- Move receiver switch back to the “REMOTE” position. Go to step 3.

Doesn't light:

- Check to see if the main gas supply is in “ON”,
- Is the pilot lit?
- Valve knob in “ON” position,
- Check and make sure rocker switch **ON FIREPLACE** is in “REMOTE” or “OFF” position,
- If burner still doesn't light go to Step 4.

3. Push the “30 min”, “60 min”, or “120 min” button on the transmitter, (you should hear a “BEEP” coming from the receiver) and the burner should ignite.

If the burner doesn't light:

- If no “BEEP” is heard push and hold “LEARN” button for 10 seconds on the face of the receiver. Release, you should hear 3 “BEEPS”.
- Then press and release the “LEARN” button, you should hear a “BEEP”.
- Then push the “30 min”, “60 min”, or “120 min” button within 5 seconds; you should hear several “BEEPS”.

4. If step 2 and 3 do not work, then call Skytech Systems, Inc. @ 888.672.8929 for tech support.