



















MODEL: ESTOP-LC-KIT

ESTOP1-0H Gas Timer Locking Cabinet Kit

For use with Outdoor Fire Pits and BBQ Grill applications

Installation and Operating Instructions

IF YOU CANNOT READ OR UNDERSTAND THESE INSTALLATION INSTRUCTIONS

DO NOT ATTEMPT TO INSTALL OR OPERATE THIS APPLIANCE

CALIFORNIA PROPOSITION 65 • WARNING

This product is designed to operate with one of the following fuel sources: Liquid Propane or Natural Gas. The fuel used to operate this product, and the products of combustion of such fuel, can expose you to chemicals including Benzene which is known to the State of California to cause cancer, birth defects and other reproductive harm and Carbon Monoxide which is known to the State of California to cause birth defects or other reproductive harm.

(For more information go to: www.p65Warnings.ca.gov.)



Warning: For Outdoor Use Only



We recommend that our gas hearth products be installed and serviced by professionals who are certified in the U.S. by the National Fireplace Institute® (NFI) as NFI Gas Specialists. **PRODUCT DESCRIPTION:** This ESTOP-LC-KIT (recessed mounting kit) is designed to be installed with a match throw style fire pit or a BBQ grill applications. Use the ESTOP1-0H gas timer with this kit. **The ESTOP1-0H Gas**<u>Timer is not supplied with this kit and must be purchased seperately.</u> The gas timers <u>must</u> be oriented in the upright position as shown in the instructions. **NOTE**: All gas lines <u>must</u> enter from the back side of the gas timer to use this mounting kit. Ensure to install the plugs provided with the gas timer and seal them with gas rated Teflon tape before installing the kit.

FOLLOW LOCAL CODES IF APPLICABLE FOR THIS INSTALLATION

INSTALLING THE LOCKING CABINET KIT

Tools Needed: Power Drill/Screw driver with a Phillips head tip, 1/4" Drill bit, Pliers, Saw, Pencil, Pliers

CAUTION: Ensure the gas lines are accessible for connections to the gas timer before beginning this installation process.

Step 1: Determine the location of the locking cabinet and cut a $7\frac{1}{8}$ x $7\frac{1}{8}$ hole into the wall board.

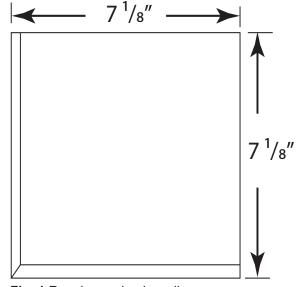


Fig. 1 Rough opening in wall.

Note: The hole in the wall will be taller than needed to install the back panel however, the additional height (top and bottom) provides clearance for the face plate screws when installed.

Step 2: After cutting hole in wall, place the Back Panel into the hole, centered side to side and top to bottom and mark the four holes in the panel with a pencil. See Fig. 2.

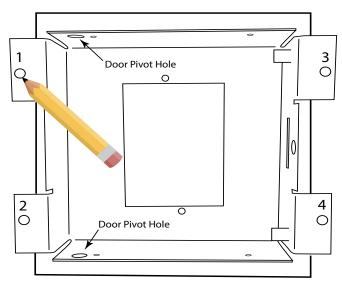


Fig. 2 Shows back panel centered in wall opening.

Step 3: After marking the four holes remove the back panel and use a ½" bit to drill out each marked hole.

Note: The two larger holes on the inside of the back panel are where the locking door pivots open and close. If the holes are on the leftside, the door will open to the left, if the holes are placed on the rightside, the door will open to the right.

Step 4: Install the Gas Timer using the two screws provided with the gas timer into the back panel. See Fig. 3.

Note: At this time, it would be a good idea to install the gas lines into the gas timer for ease of installation.

ENSURE YOU TEST FOR GAS LEAKS BEORE PROCEEDING.

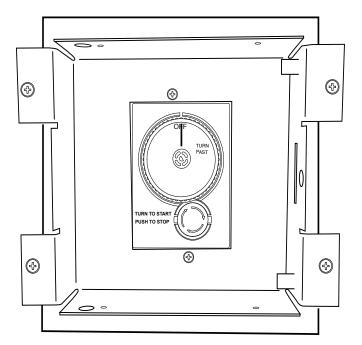


Fig. 3 Shows gas timer installed into back panel.

After gas lines are installed, carefully mount the back panel into position using the four screws, nuts and washers provided this kit. See Fig. 4.

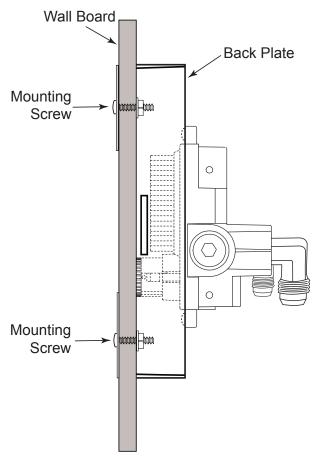


Fig. 4 Side view install of gas timer with 90° gas fittings. **Note**: Gas lines can enter as shown or straight out depending on application.

Step 5: Install the control face plate inside the back panel. Align the two holes in the top and the two holes in the bottom and use the four screws provided to secure the face plate.

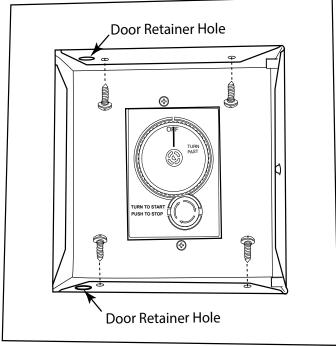


Fig. 5 Installing face plate.

Step 6: Pick up the door out of the box and peel the plastic protective coating off the metal. Align the holes in the door ends with the two holes at the top and bottom of the face plate. Using the two push retainers, pull the top pin out of the base and insert the base into face plate holes. When the base is pushed all the way down against the end, insert the pin to lock the push retainer into place. See Fig. 6.

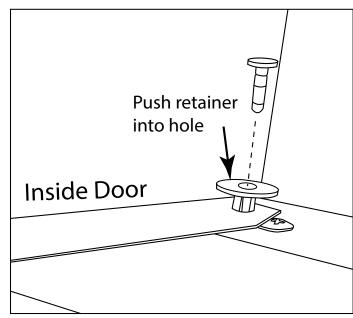


Fig. 6 Installing push retainers.

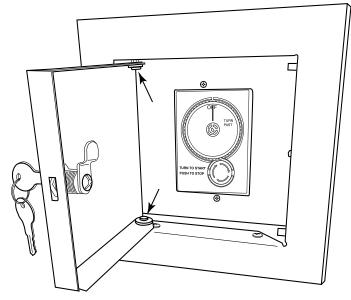


Fig. 7 Shows push retainers installed.

Step 7: Insert key into the lock, push door closed, turn key clockwise to lock cabinet. Remove key. See Fig 8.

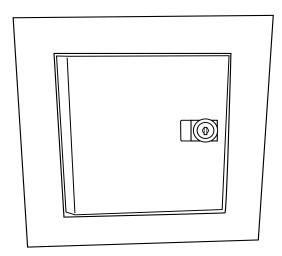


Fig. 8 Cabinet door closed and locked.

Installation is now complete.

OPTIONAL LOCK REMOVAL

If a locking cabinet is not necessary, a black rubber gromment (supplied with this kit) can be installed in place of the lock set. To do this follow the instructions below.

Step 1: Open the locking door and insert a Phillips screwdriver into the end of the lock to remove the latch as shown in Fig. 9.

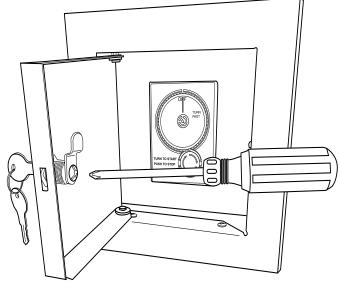


Fig. 9 Removing lock set latch.

Step 2: After the latch is removed, use a pair of pliers to remove the nut securing the lock set to the back of the door. After the nut is remove then slide the lock set out of the door assembly.

Step 3: Locate the black rubber gromment and squeeze it carefully into the hole, working it until the gromment fits evenly around the hole. See Fig. 10.

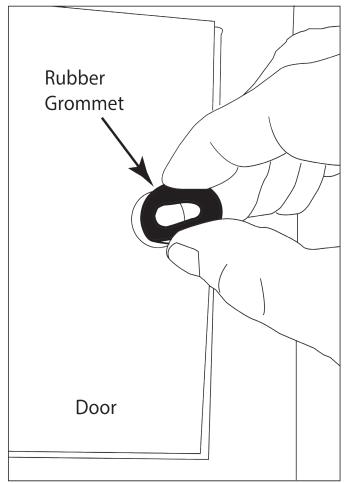


Fig. 10 Inserting gromment into door.

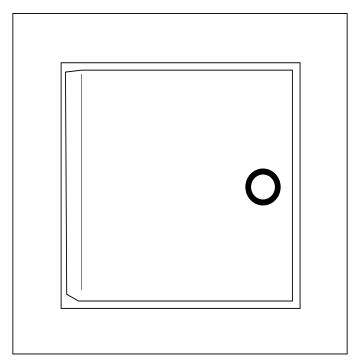


Fig. 11 Show black gromment properly installed in door.

Installation of black gromment is now complete.

OPERATION


LOCKING CABINET

- 1. Insert key into lock, close door until it is flush with front face then turn key clockwise to latch in closed position.
- 2. Remove key.

NON-LOCKING CABINET

1. Push door closed until it is flush with the front face. Bullet catch will hold door closed in position.

REPLACEMENT PARTS

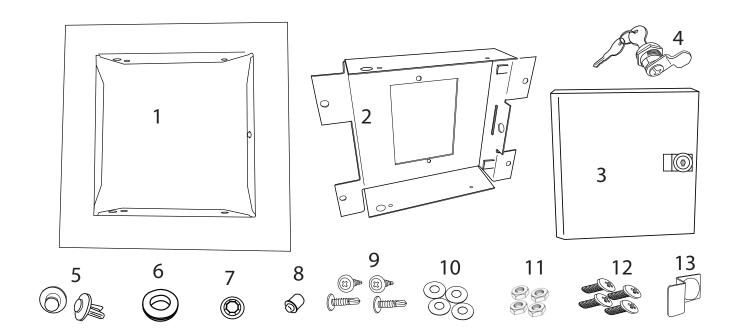

REPLACEMENT PARTS LIST

#	Description	Part Number	Qty.
1	Control Face Plate - Stainless	77132	1
2	Back Panel - Stainless	ESTOP-BACK-PANEL	1
3	Door with Lock - Stainless	ESTOP-DOOR	1
4	Lock Set with Keys	U9945KA	1
5	Push Retainer	A12567	2
6	Rubber Grommet	9600K21	1
7	Push Nut (holds bullet catch)	4HFW9	1
8	¾" Bullet Catch	1662A11	1
9	10x 3/4" Mod. Truss Phllips Screws	BCP75	4
10	#10 Stainless Washers	WASHER10SS	4
11	10x24 Stainless Nut	ST3-113-1020	4
12	10x24x 1.25 Phillips Pan Screw	SCREW1024PANSS	4
13	Door Pull	LOCKHANDLE	1

FOR TECHNICAL SERVICE, CALL:

U.S. INQUIRIES

(855) 498-8324 or (260) 459-1703

CANADIAN INQUIRIES

(877) 472-3923

Skytech Products Group 9230 Conservation Way Fort Wayne, IN 46809 Sales Support: (888) 699-6167

Website: www.skytechpg.com

MANUFACTURED EXCLUSIVELY FOR SKYTECH II, INC



LIMITED WARRANTY

- 1. Limited Warranty. Skytech II, Inc. ("Skytech") warrants that each new Skytech Control System, including all hardware, parts and components (the "System"), when used in accordance with the instructions furnished by Skytech provided with each System, shall be free in all material respects, of defects in materials and any workmanship under normal use, subject to proper installation ("Limited Warranty"). This Limited Warranty is non-transferrable and sets forth our sole and exclusive liability and the sole and exclusive remedies available in relationship to any non-conformity, defect or similar claim. This Limited Warranty only extends to the original retail purchaser of the System (the "Customer") and expires upon any sale or transfer of the home where the System is installed by the Customer.
- 2. System Sold As Is. Subject to this Warranty and any applicable state law, each System is sold by Skytech to a Customers, limitations, reservations of rights, exclusions, and qualifications set forth on Skytech's website, www. skytechpg.com, all of which are considered part of the Warranty and are incorporated herein (collectively, the "Additional Terms"). Each Customer, by purchasing and/or using any System or any portion thereof, does so subject to the Warranty and the Additional Terms.
- 3. Installation and Use of System. Improper Installation, adjustment, alteration, service, or maintenance can cause property damage, personal injury, or loss of life. Thoroughly read the installation and operating instructions of this Control as well as the appliance it will be used in conjunction with as a system. If applicable, read the maintenance instructions before installing this control. This product is designed for use with an attended hearth appliance or fire feature. Adults must be present when the Control System is operating. DO NOT program or thermostatically set this Control to operate a hearth appliance or fire feature when Adults are not physically present. Furthermore, DO NOT leave the hearth appliance or fire feature burning unattended; it may cause damage or serious injury. If an Adult is going to be away from the hearth appliance or fire feature for any length of time, then the handheld/wall mount, receiver/control module and application should be in the "OFF" position.
- 4. Repair or Replacement of System or Parts. Should any System, or any hardware, components and/or parts contained therein fail due to a defect in workmanship or material provided by Skytech after the purchase of a System by a Customer, Skytech shall repair or, at its option, replace the defective System or part, hardware or component, subject to the Customer's compliance with all terms and conditions contained herein governing service and claims under the Warranty. Skytech shall provide replacement parts at no charge for the first (5) five years of this warranty, and at market cost for the Lifetime of the product to the original Customer. Gas valve and gas valve components will be available at no charge for one (1) year. If Skytech does not have the parts for an individual model, then a comparable replacement System will be provided at no charge within the first (5) five years after purchase, and then at market cost for the Lifetime of that product to the Customer.
- **5. Warranty Claims; Skytech Service.** To submit a valid claim under the Warranty (each, a "Valid Claim"), a Customermust comply with the following:
- a) Obtain a Return Material Authorization ("RMA") number from Skytech by calling (855) 498-8324; and
- b) Provide written notice to a Skytech or an Authorized Dealer ("Dealer") and provide the Name, House Address, Email Address and Telephone Number of the Customer;
- c) Describe the System model number and nature of the defect, nonconformity, or other problem with the System;
- d) Provide such notice within thirty (30) days of discovery of such defect, nonconformity, or problem;
- e) Securely pack and ship the defective Skytech Product to Skytech II, Inc. ATTN: Warranty Department at 9230 Conservation, Fort Wayne, IN 46809. Customer assumes all costs and risks associated with transportation to Skytech (i) the RMA number is only valid for thirty (30) days from the date the RMA was issued, (ii) the RMA number should be clearly marked on the outside of each box being returned. Skytech may refuse shipments that DO NOT meet all of the Valid Claim requirements. Skytech is not responsible for any refused shipments or any damage caused due to shipping, whether or not it was a Valid Claim. Skytech shall be responsible for return shipment charges. Compliance with these requirements is a condition to coverage under this Limited Warranty.

Skytech may refuse any shipment(s) that does not meet all of the Valid Claim requirements. Skytech is not responsible for any refused shipments or any damage caused due to shipping, whether or not it was a Valid Claim. Skytech shall be responsible for reasonable return shipment charges for any Skytech System returned whether or not Skytech determines there is no defect with the System, reject for failure of the Customer to submit a Valid Claim, or otherwise determine is not eligible for service under the Warranty.

Upon receipt of a Valid Claim and the properly-returned System, Skytech shall, at its option, either (a) repair the System, at no charge to the Customer, or (b) replace the returned System with a new comparable System, at no charge to the Customer, or (c) provide the Customer with a refund in an amount equal to the price paid by the Customer for the defective System not including any service or labor cost associated with the installation or otherwise. Any System or

hardware, component or part repaired by Skytech hereunder, or any replacement System, hardware, component or part shall be shipped to the Customer by Skytech at Skytech's cost and the Warranty, the Additional Terms, and all other terms and conditions set forth herein shall extend to such repaired or replacement System, hardware, component or part. Skytech shall pay no refund before Skytech from the Customer receives the defective System, hardware, component and/or parts. Any obligation of Skytech under this Section 4 shall be and remain subject to Skytech's right to physically inspect the defective System, hardware, component and/or part returned to Skytech by the Customer. Some States do not allow the exclusion or limitation of incidental and consequential damages or limitation on how long an implied warranty lasts, so the above limitation may not apply to you. This warranty gives you specific rights and you may have other rights, which vary from state, province, or nation. To the extent allowable under any law, the liability of Skytech is limited to the express terms of this warranty, and Skytech expressly disclaims any and all implied warranties, including any warranties of fitness for a particular purpose or merchantability.

REV. 2-24-17

Print information and detach at dotted line and return to: Skytech Products Group, Attn. Warranty Dept., 9230 Conservation Way, Fort Wayne, IN 46809 Phone: (855)498-8224

Warranty Information

Purchase Date:	Model:	
Purchased From:		
Customer Name:		Phone:
Address:		
City:	State/Prov	Zip/Postal Code
E-mail Address:		

Please send a Proof of Purchase (original receipt) copy along with your warranty form.